 


mammoth

1100 ml

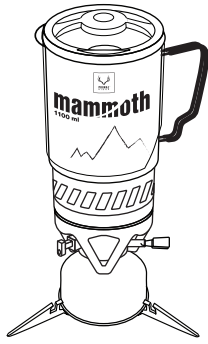

SOLO COOKING SYSTEM

Thank you for choosing our product.

IMPORTANT: We advise you to read these instructions carefully before use. It contains all necessary instructions for using this cooking system. It is important that you familiarise yourself with the cooking system before connecting gas cartridge. These instructions should be kept for future reference.

This product is for OUTDOOR USE ONLY.



CONTACT DETAILS

If you have any fault or problem with your Primal Ridge Mammoth 1100ml Solo Cooking System please contact us at;

Website: www.primalridge.com

Email - admin@primalridge.com

1. SAFETY INSTRUCTIONS

This product is for OUTDOOR USE ONLY. Only use in well ventilated area. Do not use in tents or inclosed spaces.

Check that the seal in the burner assembly is in good condition before connecting to the gas cartridge.

Check the stove is in good condition before use.

Do not burn with empty pot as this may damage the pot or cause fire. Do not heat continuously for long periods as this may damage the burner and pot.

If there is a smell of gas, do not attempt to light appliance. Extinguish any open flame and disconnect from fuel supply.

Do not store with other flammable liquids or vapours.


Keep out of reach from children.

2. CARBON MONOXIDE HAZARD



WARNING - CARBON MONOXIDE HAZARD.

This appliance produces carbon monoxide, that has no odour. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent or home.

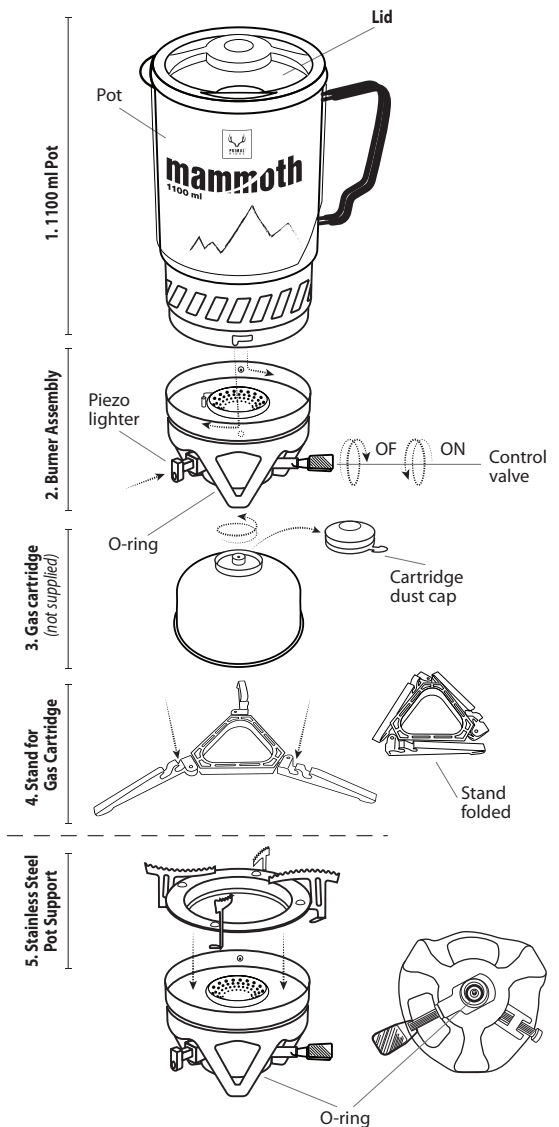

3. GAS CARTRIDGE

Use a High Performance Iso-Butane / Propane gas cartridge. (not supplied).

An Iso-Butane gas cartridge will pack inside pot.

Store cartridge below 40 degrees Celsius / 104 degrees Fahrenheit.

Cartridge must conform to EN417 or AS2278 standard. It may be hazardous to fit other types of gas cartridges.

4. ASSEMBLY

Refer to the diagrams above and Section 10 (page 2) to view the assembly and packing of the Primal Ridge Mammoth 1100ml Solo Cooking System.

When unpacking contents, check the **control valve** in the Burner Assembly (2) is closed. (Turn clock wise to close)

Before connecting the gas cartridge ensure the **O-ring** (located under control valve) is in good condition and seated properly in the control valve. If the O-ring is damaged, worn or leaking do not use this appliance.

When installing the gas cartridge (3), remove the **cartridge dust cap** and screw securely to the Burner Assembly (2). Do not over tighten. When installing and dismantling the gas cartridge there may be a small release of gas. Install the cartridge stand (4) by unfolding the legs and attaching to the gas cartridge (3).

Always operate the cookware on a firm, level surface.

Stainless Steel Pot support: The pot support (5) can be used for various pots other than the Primal Ridge Mammoth 1100 ml cookware. Unfold pot support, place it on top of burner assembly (5). Confirm that the support is fully attached, seated and stable.

5. OPERATION WARNINGS

Always change the gas cartridge outside in a well ventilated location, away from any ignition sources, such as open fire.

Do not leave the cookware unattended while in use.

If you smell gas or hear gas escaping before the control valve is open, do not attempt to light the burner. Confirm that the gas cartridge is properly secured to the burner assembly and the control valve is closed by turning it clockwise.

If you still smell gas, remove the fuel cartridge and refer to trouble shooting section. To check if gas cartridge is empty, lightly shake gas cartridge and listen for noise.

6. OPERATING INSTRUCTIONS

Place the cookware on a horizontal / flat surface away from any combustible material. The cookware should not be moved or tilted during cooking to remove any risk of flaring.

The Primal Ridge cooking system does not require any kind of wind screening. Always operate in well ventilated area and allow good air flow to remove any risk of overheating. Overheating may cause the gas cartridge to explode.

Always light the burner before placing the pot on the burner. Make sure the burner is at arms length, away from your face, during ignition.

Lighting the burner. Turn the *control valve* counter clockwise to allow gas flow and press the *Piezo lighter* to ignite the burner.

Adjust the flame setting by using the *control valve*. Counter clockwise for high heat setting and clockwise for low heat setting.

Do not move, lift or tilt burner when cooking. Fuel can spray and cause flare ups.

Do not use burner with empty pot as this may damage the pot or cause fire. Always add liquids or liquid food to pot before applying heat to cook.

Do not overfill pot to avoid boil over. Place pot (1) on top of the burner assembly (2) using the locating lugs and gently turn clockwise to lock into place.

When using the stainless steel pot supports (5): Never use a cooking pan that is too large or heavy. Make sure the pot is a suitable size and stable prior to use.

Always use the pot support legs and make sure the legs are unfolded completely (4) and the gas cartridge is seated securely and properly onto the pot support before placing pots onto the burner.

7. STORAGE AFTER USE

To extinguish the flame turn *control valve* clockwise till control valve is closed. Remove cooking pot (1) from burner assembly (2). Allow the pot and burner assembly sufficient time to cool completely before packing. Always check that the burner (2) is extinguished properly before disconnecting the gas cartridge (3).

Remove the cartridge stand (4) from gas cartridge (3) and fold legs.

Always remove the gas cartridge after use. Unscrew the gas cartridge (3) from burner assembly (2) and replace the *plastic dust cap* on gas cartridge for storage. For instructions on how to pack for storage follow the illustration shown in section 10. Store gas cartridge in a dry, well ventilated area, away from any heat source and out of reach of children.

Cleaning Instructions: Hand wash with soapy warm water. Do not use in dishwasher or clean with abrasive materials such as scouring pads as this may damage the pot.

8. TROUBLE SHOOTING AND MAINTENANCE

Do not modify this appliance. Modifications can be hazardous and will void the warranty. This product should be used in accordance with these instructions and where a problem cannot be corrected using these instructions contract Primal Ridge.

Where the burner assembly is not operating correctly, check to

ensure that air holes are not blocked and the jet is not dirty or contaminated.

O-ring: If the *O-ring* is damaged or cracked, contact Primal Ridge for service.


Flame does not extinguish: The *Control Valve* may be damaged. Tighten valve as much as possible, blow out flame, and immediately detach fuel cartridge. Contact Primal Ridge.

9. WARRANTY INFORMATION

If you find any fault or problem with your purchase please email us immediately at admin@primalridge.com We will do our absolute best to correct any problem. Make sure you tell us your Amazon order number and provide a picture of the problem. We will then replace the product right away.

The Primal Ridge Mammoth 1100 ml has a 1 year warranty. Should this product not function properly under normal use within 1 year of purchase, contact Primal Ridge at admin@primalridge.com. Primal Ridge will replace the unit free of charge. The warranty applies only to the original purchaser. The warranty does not cover any issue arising from misuse, modification, improper maintenance, negligence, normal wear and tear, accident or use other than as described in these instructions.

10. ASSEMBLED COOKWARE

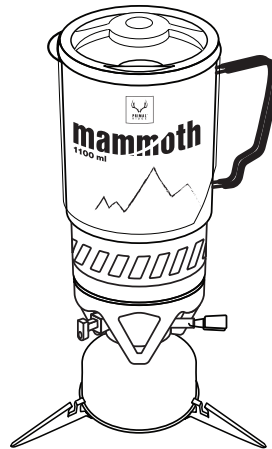

Storage of Cookware / Packing Order

